

2.17 Definitions - Q

Qualified Non-Generator Voltage Support Resource: A resource that is neither a Generator nor a synchronous condenser but that is capable of providing the ISO with Reactive Power on a dynamic basis, that is energized and under the operational control of the ISO, or a Transmission Owner, ~~or an External Control Area operator~~, that meets the resource-specific technical and testing criteria specified in the ISO Procedures, and that is ineligible to receive Reactive Power compensation other than as a Qualified Non-Generator Voltage Support Resource. The Cross-Sound Scheduled Line shall be a Qualified Non-Generator Voltage Support Resource, provided that it meets the technical and testing criteria in the ISO Procedures.

Quick Start Mode: The setting of a block of generator units capable of remote start-up by a Transmission Owner so that it can synchronize and reach full output within fifteen (15) minutes.

Quick Start Reserves: Capacity of a block of generator units that is set to Quick Start Mode by request of a Transmission Owner.